

installation techniques and detailing


set-in cove skirting

JANUARY 2006

The Altro Set-in Cove Skirting (PRCS100) should be fixed to the perimeter walls with AltroFix 25NF contact adhesive before the main flooring. Seal adjacent sections and mitres within the skirting with AltroMastic 100. Lay the sheet flooring, cut in and groove and hot weld it to the base of the skirting.

Flooring thickness suitability: 2.0mm and 2.5mm with base lip and 3.5mm/4.0mm with base lip removed.

Drawing Ref: D3

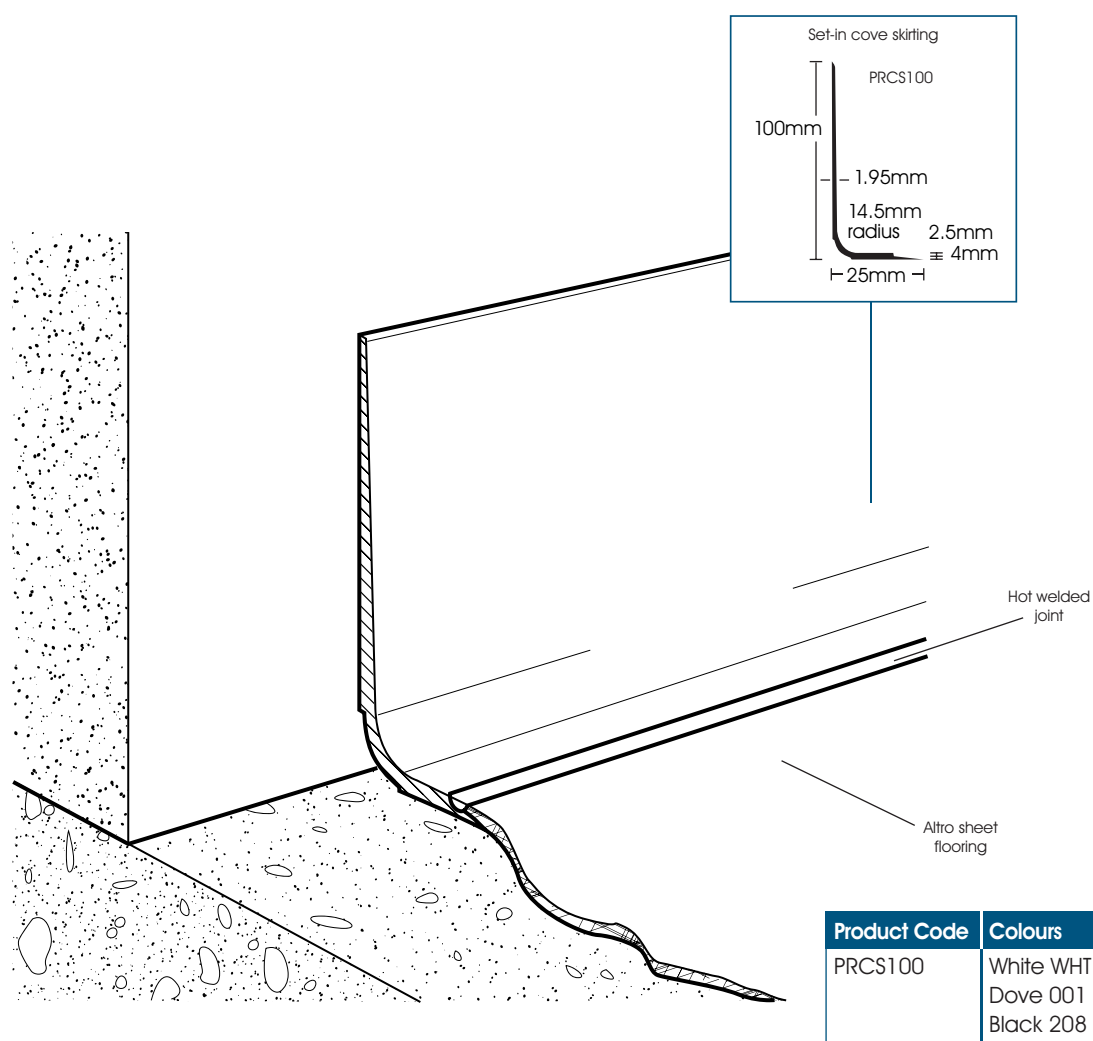

Product Code	Colours	Length
PRCS100	White WH1 Dove 001 Black 208	2m

for further information or technical advice

tel: 01462 707600 fax: 01462 707515

e-mail enquiries@altro.com or explore www.altro.com