



altro

the future is safer with altro


Altro Whiterock™ hygienic P250 PVCu ceilings suspended ceiling bulkhead detail

JULY 2011

typical specification (Ref: CF8)

Mechanically fix PMF12 soffit cleat to concrete structure. Fix PGA1 angle section to soffit cleat with nut & bolt PMF11. Fix angle section to primary support channel PMF7 with pop rivets. Fix primary support channel to PMF5 ceiling section with connecting clip PMF9 (not shown). For bulkhead detail, mechanically fix PMF6 perimeter channel sections together to form downstand. Fix PMF5 ceiling sections vertically into PMF6 perimeter channel.

Mechanically fasten PVCu internal/external corners (P257/P255) to perimeter channel junction with 13mm wafer head screws. Cut Altro P250 PVCu ceiling boards to length and slot into PVCu corner sections, fix boards to PMF5 ceiling sections with 13mm wafer head screws. Apply silicone sealant (A802) to inner edges of PVCu corners.

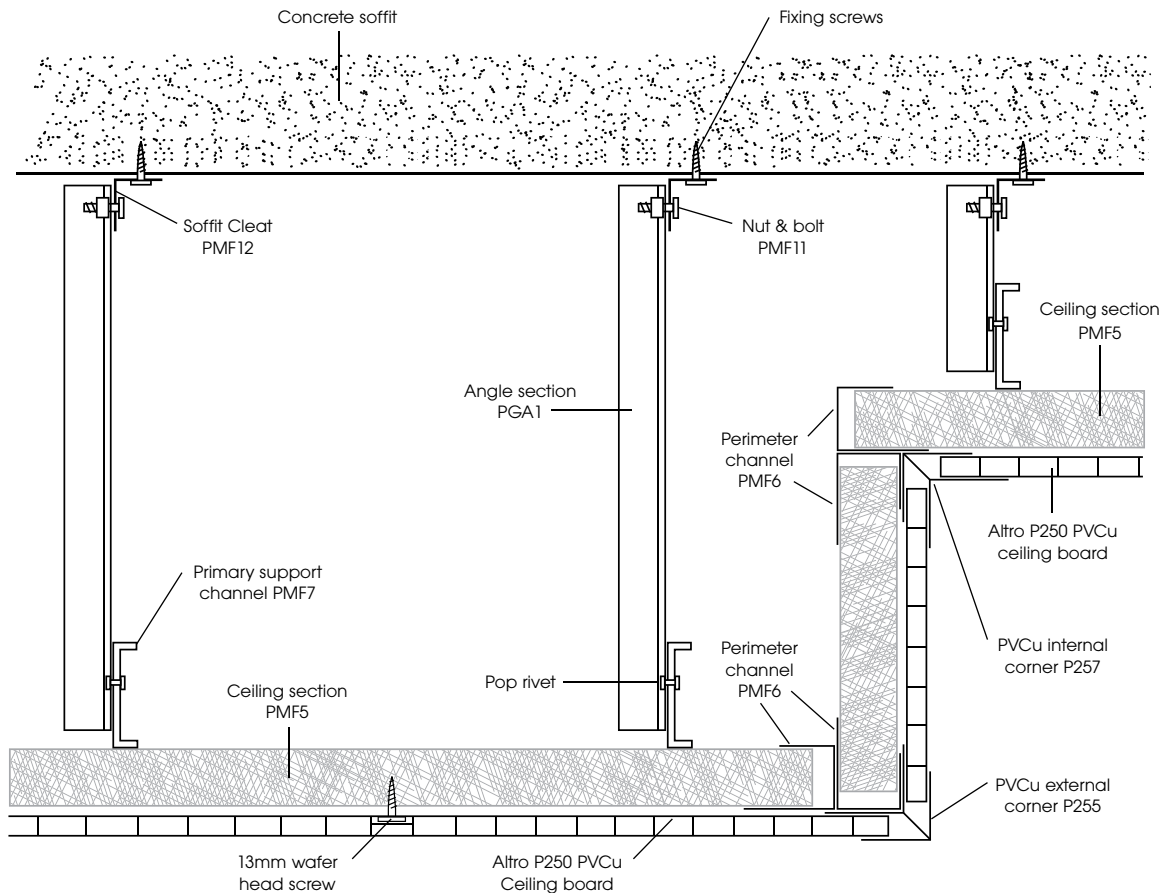

for further information or technical advice

tel: 01462 707600 fax: 01462 707504

e-mail enquiries@altro.com or explore www.altro.com