



altro


## installation techniques and detailing

transition with access covers

JANUARY 2006

For locations where sheet vinyl flooring must be finished to access covers or hatches, such as the Visedge Series\*. The sheet vinyl flooring is fixed down then cut in, grooved and hot welded to the PVC insert within the Visedge system.

\*Visedge Series and installation instructions from:  
Howe Green Limited, Tel 01920 463230,  
e-mail [info@howegreen.co.uk](mailto:info@howegreen.co.uk).  
**Drawing Ref. D16/03/05**

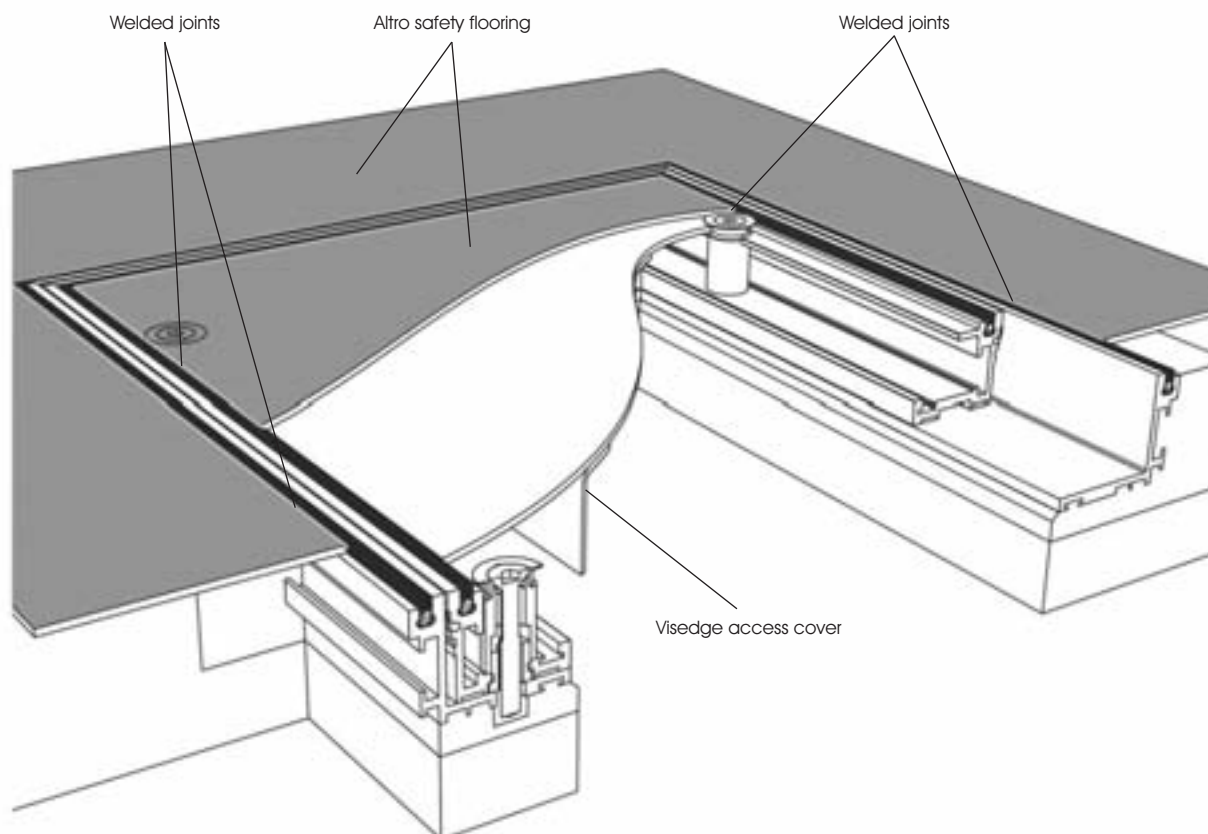

for further information or technical advice

tel: 01462 707600 fax: 01462 707515

e-mail [enquiries@altro.com](mailto:enquiries@altro.com) or explore [www.altro.com](http://www.altro.com)