



altro

## installation techniques and detailing


transition with other floor surfaces

JANUARY 2006

For locations where sheet vinyl flooring must be finished to another floor surface with a water tight seal. A Visedge VR vinyl securing strip\* should be installed along the transition. The sheet vinyl flooring is fixed down then cut in, grooved and hot welded to the PVC insert within the Visedge system.

\*Visedge and installation instructions from:  
Howe Green Limited, Tel 01920 463230,  
e-mail [info@howegreen.co.uk](mailto:info@howegreen.co.uk).

**Drawing Ref. D12/08/05**

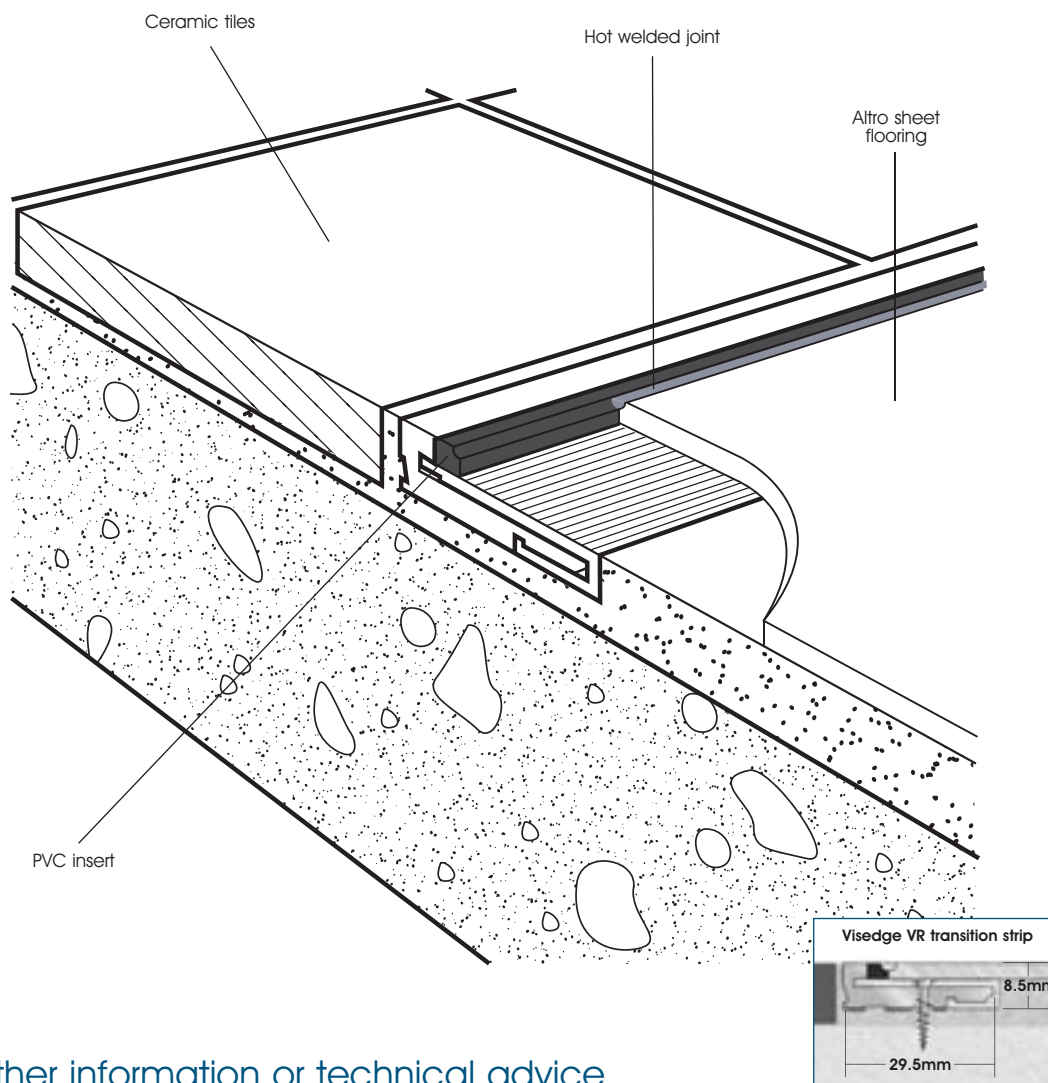

for further information or technical advice

tel: 01462 707600 fax: 01462 707515

e-mail [enquiries@altro.com](mailto:enquiries@altro.com) or explore [www.altro.com](http://www.altro.com)