



altro

CI/SfB reference
| (43) | T | (U47)

March 2005

installation techniques and detailing


straight laid

MARCH 2005

For areas not subjected to excessive spillage, cut the floor covering flush to the perimeter walls and skirtings. Application of AltroMastic 100 to the perimeter

subfloor is recommended.

Drawing Ref: D1/03/05

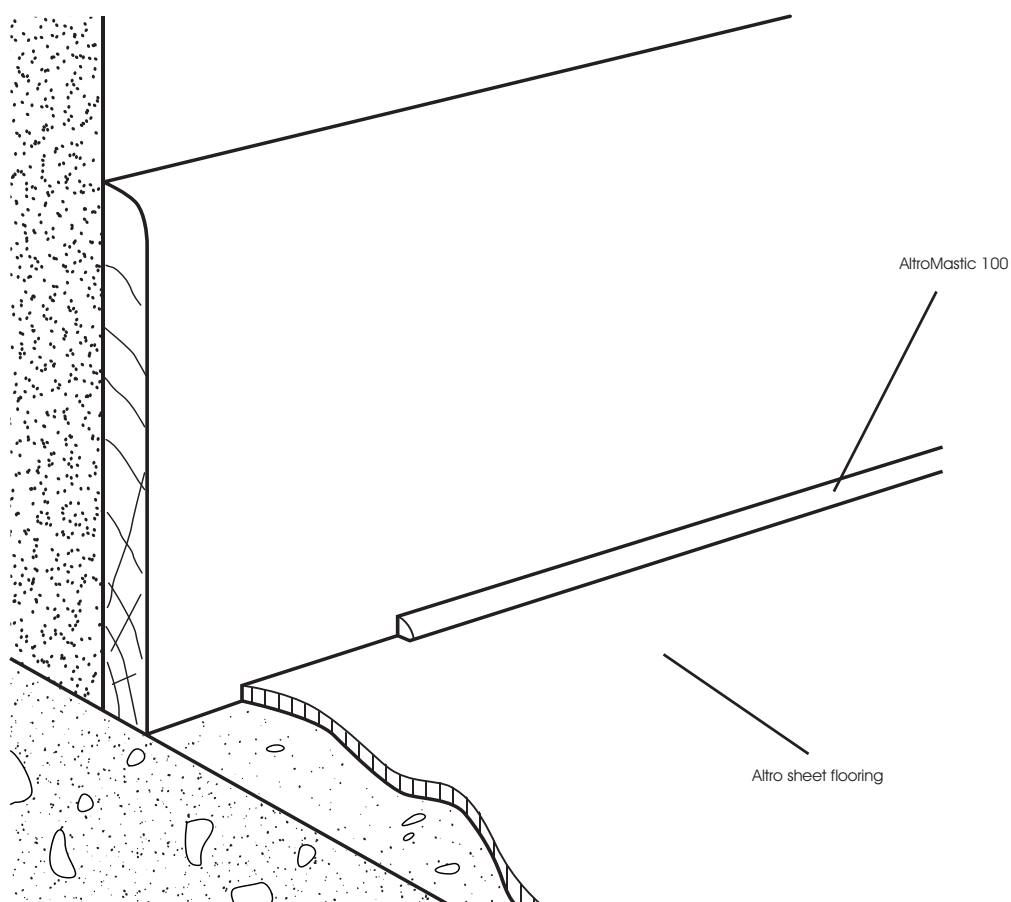

for further information or technical advice

tel: 01462 707600 fax: 01462 707515

e-mail enquiries@altro.com or explore www.altro.com